

IPX Series Firmware Update Procedure

IP-CONSOLE-GH

This article provides instructions for updating your AtlasIED IPX IP-CONSOLE-GH to firmware 2.6.0.1499.18.

- Log into the Console Webgui via its IP address with any browser.
- The Username is admin and the password is the last 6 characters of the Mac address.
- Once logged in, select the "system" option in the left-hand side Sub-Menu.
- Then click the "Upgrade" Tab on the Top Sub-Menu.
- In the Software Upgrade section click the "select" button.
- Browse for the firmware file a32i_atlasied_2.6.0.1499.18_20230810_full.zip
- The Firmware packet does not need to be unzipped, select the firmware as a zipped file.
- Now click on the "Upgrade" button.
- You should now see a progress bar showing the upgrade process on the IP-Console-GH display. Once the update process is complete IP-CONSOLE-GH will reboot and come back up with the firmware updated.

(ÖAtlas IEE M								
	Information	Account	Configurations	Upgrade	Auto Provisio	on	Tools	Reboot Phon
> System					т.,			
> Network	Software upgrade	Current Softwa	are Version: 2	.6.0.1499.18	•		•	
> Line	Unarada Comun	System Image	File:		Select		Upgrade	
> Phone settings	opgrade Server	Enable Auto U	pgrade: [_			
> Phonebook		Upgrade Serve Upgrade Serve	er Address1:					
→ Call logs		Update Interv	al:	Apply	Hour(s)			
Function Key	Firmware Informa	ation	are Version 2	6.0.1499.18				
Application		Server Firmwa	re Version: C	hecking				
› Security		New Firmware	Information:					
> Device Log	Ring Upgrade							
		Load Server Fi	le:		Select		(*.wav) Upl	bad
	Ring List							
				File Name			File Size	Delete
	Background Upgra	ade						
		Load Server File:			Select ((*.bmp *	.png *.jpg *.jpe	g) Upload
	Rackground List							