



MMK15-RM / MMK17-RM

M15" / 17" LCD

Single Rail Console with Modular KVM Switch



1601 Jack McKay Blvd. • Ennis, Texas 75119 U.S.A.
Telephone: 800.876.3333 • Fax: 800.765.3435




Packing List


The complete 15" / 17" single rail console with modular KVM switch package consists of:

- One 1RU 19" Rack Mount Console
- Two Rails with Front and Rear Bracket
- Two Extended Brackets. (See Below)
- Two Short Brackets. (See Below)
- Two Bracket Attachments. (See Below)
- One 5.9' (1.8 m) KVM cable. (HDDB-15 / VGA + PS/2 x 2)
- One USB Cable
- One DC Power Adapter
- One Power Cord
- One User Manual CD
- One Quick Installation Guide
- Two Keys
- Six Flat Screws (for rail mount to console body)
- Six Screws (for replace extended bracket)


Check to make sure that the unit was not damaged in shipping. If you encounter a problem, contact Atlas Sound. Please read this manual thoroughly, follow the installation and operation procedures carefully to prevent any damage to the product, and / or any of the devices that connect to it.

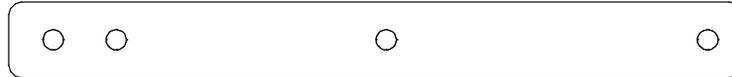

TWO Bracket Attachments

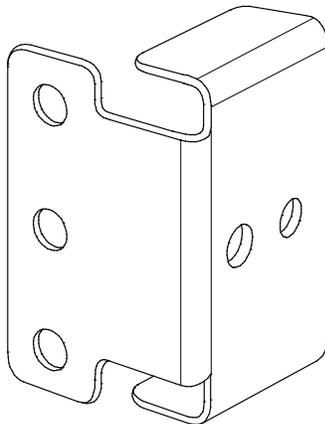

Two Short Brackets

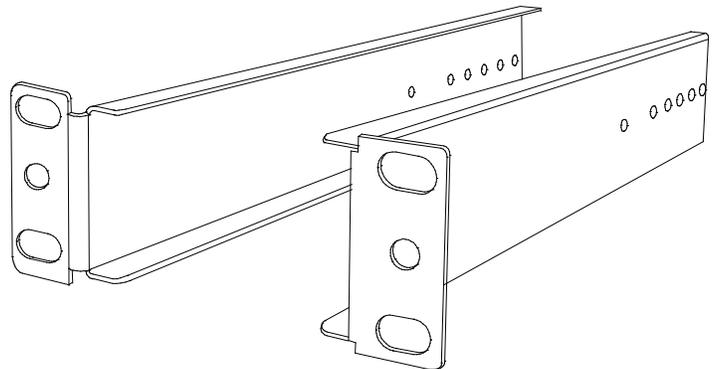

Two Extended Brackets





Safety Instructions



The lightning flash with arrowhead symbol within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. **WARNING:** To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.
16. To completely disconnect this equipment from the mains, disconnect the power supply cord plug from the receptacle.
17. The mains plug of the power supply cord shall remain readily operable.





CAUTION – When Installing the Product

- Plugging in or unplugging the power cord with wet hands may result in electric shock.
- Never move the unit with the power cord plugged into the wall, as damage to the power cord may result.
- When unplugging the cord from the wall, grasp the plug, NOT the cord.
- Never install this product in humid or dusty locations, nor in direct sunlight, near sources of heat, or in areas where sooty smoke or steam are present. Fire and electric shock may result.
- Keep all sides of the unit at least 3½" away from objects that may obstruct air flow to prevent the unit's internal temperature rise.



WARNING – When the Device is in Use

- To prevent electric shock, do not remove the product cover as there are high voltage components inside. Refer all servicing to Atlas Sound.
- Should any of the following irregularities occur during use, immediately switch off the power, disconnect the power cord from the AC outlet and contact Atlas Sound. Do not attempt to continue operation with the product as this may cause fire or electric shock:
 - Smoke or strange smell coming from the unit.
 - If the product falls or the case is damaged.
 - If water or any metallic objects falls into the product.
 - If the power supply cord is damaged in any way.
 - If the unit is malfunctioning.
- Do not insert or drop metallic objects or flammable materials into the ventilation holes of the product's cover, as this may result in electric shock or fire.
- Do not place any containers with liquid or metallic objects on the top of the product. If any liquid spills into the unit, fire or electric shock may result.
- Never operate this product or touch the power supply cord during an electrical storm, electric shock may result.
- Never exceed the wattage on the product when connecting equipment. Fire and/or property damage may result.
- Operate the product only with the voltage specified on the unit. Fire and/or electric shock may result if a higher voltage is used.
- Do not modify, kink, or cut the power cord. Do not place the power cord in close proximity to heaters and do not place heavy objects on the power cord, including the product itself, doing so may result in fire or electrical shock.
- Ensure that the safety ground terminal is connected to a proper ground. Never connect the ground to a gas pipe as a catastrophic disaster may result.
- Be sure the installation of the product is stable, avoid slanted surfaces as the product may fall and cause injury or property damage.



CAUTION – When the Device is in Use

- Never place heavy objects on the product, causing it to fall and/or break can result in personal injury and property damage. In addition, the product itself may fall and cause injury and property damage.
- Contact Atlas Sound for instructions on cleaning the inside of the unit. Large accumulations of dust inside the unit may result in heat buildup and fire.
- Ensure that the power supply plug is securely plugged into the wall outlet. Never allow dust to accumulate on the power plug or inside the wall outlet.
- When cleaning the unit or the unit is not to be operated for an extended time period, unplug the power cord from the wall.





Table of Contents

Packing List	2	3. Installation	14
Safety Instructions	3	3.1 Install 15" Single Rail Console into Cabinet.....	14
Table of Contents	5	3.1.1 Notes	14
1. General Information	6	3.1.2 Hardware Kits Contents	15
1.1 Feature	6	3.1.3 Step A (Install Console):	16
1.2 Advantage.....	6	3.1.4 Step B (Replace short bracket):.....	19
1.3 Product Specification.....	7	3.1.5 Step C (Replace extended bracket):.....	20
1.3.1 15" / 17" Single Rail Console with Modular KVM Switch Specification.....	8	3.1.6 Unload Step.....	21
2. Panel Controls and OSD Function	9	3.3 Install Modular KVM Switch Step.....	23
2.1 Auto Tune	10	3.3.1 Hardware Kits Contents	23
2.2 Input Source	10	3.3.2 Install Modular KVM Switch Step.....	23
2.3 Brightness	10	3.4 Installing the Video Card and Video Driver	24
2.4 Contrast.....	11	3.4.1 Configuring the Display Settings	24
2.5 Color	11	3.4.2 Connecting the Console	25
2.6 Position.....	12	3.5 Turning on the Console	25
2.7 Language.....	12	3.6 Testing the Console.....	25
2.8 Recall	13	4. Notes	26
2.9 Exit.....	13	Warranty	28
2.10 Power Indicator	13		





1. General Information

Single rail consoles with modular KVM switch offer an industrial level input solution to optimize your space utilization by controlling your systems in just 1RU.

1.1 Feature

- Easy to Install, Single Rail Design
- 15" / 17" LCD Panel Options
- Support Sun™ Native Resolution
- Support 17 Various Keyboard Languages (Increasing)
- Bright Active TFT Display
- OSD Function for LCD Display and KVM Switch
- Durable Keyboard (Touchpad)
- Panel Protected by Tempered Glass
- Integration with KVM Switches

1.2 Advantage

Easy to Install:

With the unique separate rail design. One man can install the console easily. In case you need to maintain the console, you can easily uninstall without effecting the server above or below.

Modular KVM switches:

The user can use console as single port console or through some simple action and few screws to be 8 Port KVM console.

We support 17 keyboard languages to fit the demands of several countries.





1.3 Product Specification

1.3.1 15" / 17" Single Rail Console with Modular KVM Switch Specification

Model Name	MMK15-RM	MMK17-RM
Number Of Ports	1	
Dimension	18.5" x 17.6" x 1.7" (470.1mm x 447.5mm x 44mm)	
Package Dimension	23.9" x 21.7" x 9.0" (606mm x 551.5mm x 230mm)	
Net Weight	26.46 lbs / 12 Kg	28.7 lbs (13.0Kg)
Gross Weight	43.0 lbs / 19.5 Kg	45.2 lbs (20.5Kg)
Display Size	15" (381 mm)	17" (431.8mm)
Panel Type	Active Matrix TFT LCD	
Resolution Capabilities	Maximum Resolution up to 1024 x 768 (XGA)	Maximum Resolution up to 1280 x 1024 (SXGA)
Pixel Pitch	Supports 0.297mm x 0.297mm	Supports 0.264mm x 0.264mm
Viewing Angle (Cr>10)	Right-Left view 130° (Typ) Up-Down View 100° (Typ)	Right-Left View 60° (Typ) Up-Down View 45° (Typ)
Contrast Ratio	400:1	450:1
Brightness	White 250 cd/m ²	
Back Light	Dual Lamps	Four Lamps
Supported Colors	16.7 M Colors (8-bit with FRC)	
Response Time	Rising Time 5ms, Decay Time 11ms	Rising Time 2ms, Decay Time 14ms
Operating System	DOS, Microsoft Windows™ (3.1, 9x, 2000, NT4, ME, XP, 2003 Server), Linux, Novell 3.12-6, HP UX, Sun	
Multi Platform	Support PS/2 and USB	
System Cables	VGA + PS/2 (x2) or VGA + USB (x1)	
Keyboard Mouse	106 key PS/2 keyboard with touch pad	
Sync	45kHz ~ 80kHz	
Power Source	100VAC ~ 240VAC Input	
Power Consumption	16 Watts, 10.41 Watts for Panel	25 Watts, 19.05 Watts for Panel
Temperature	Operate: 32°f ~ 122°f (0°c ~ 50°c) Storage: -4°f ~ 140°f (-20°c ~ 60°c)	
Humidity	10% ~ 90% RH	
Chassis Construction	Heavy Duty Steel Materials	
Keyboard Language	USA, UK, German, French, Spanish, Italian, Portuguese, Dutch, Swiss, Belgium, Swedish, Norwegian, Danish, Japanese, Taiwanese, Russian, & Hebrew	
Certification	CE / FCC, UL / CUL / C-Tick, GOST	

Table 1-1. 15" / 17" Single Rail Console with Modular KVM Switch Specification



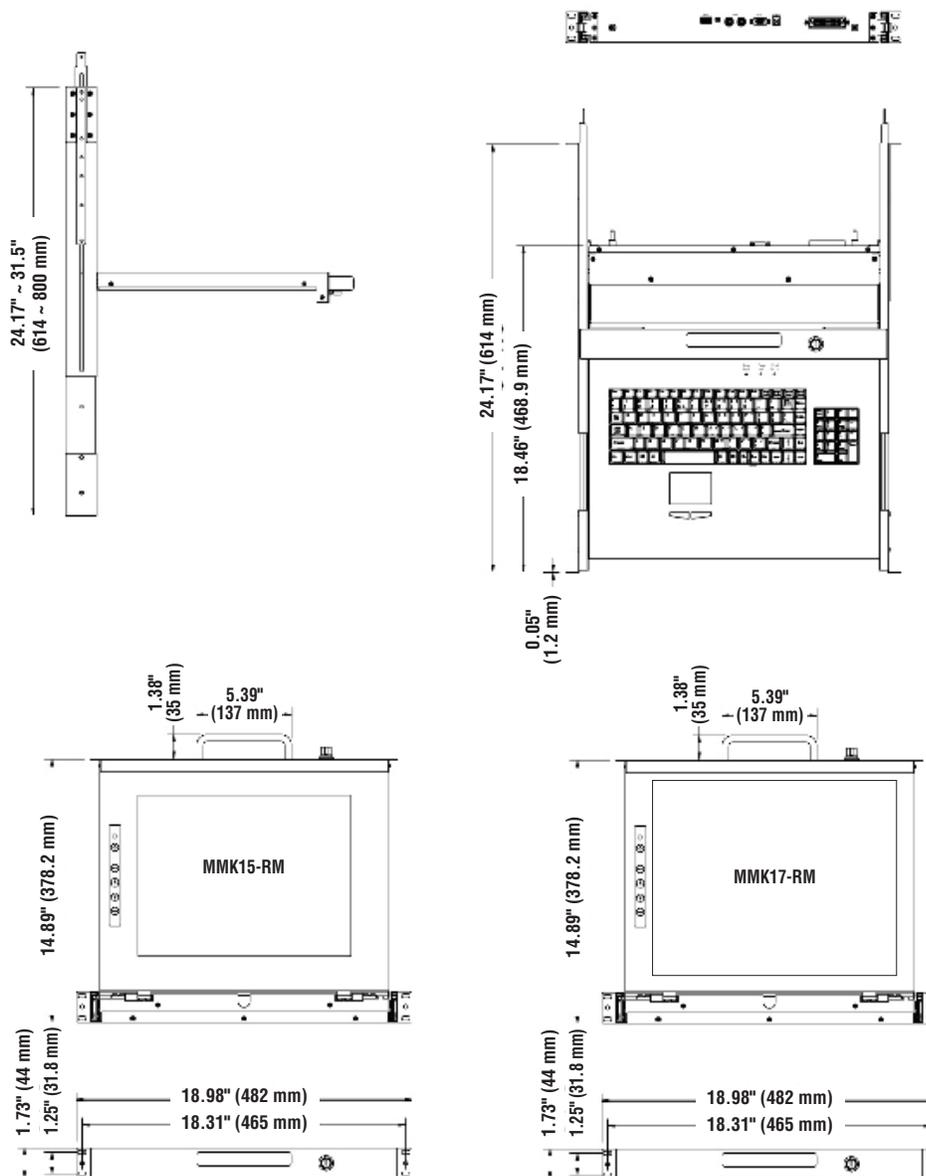


Figure 1-1. 15" / 17" Single Rail Console with Modular KVM Switch Dimensions





2. Panel Controls and OSD Function

Controls	Description
	Soft power on/off button. Adjacent LED is lit when on.
Auto	Auto-synchronize and scale down display to any valid factory preset timings.
	Press to scroll the function you want to adjust.
	Press to scroll the function you want to adjust.
Menu	To access the main menu. This button also acts as the "Enter" button.

Table 2-1. Panel Controls

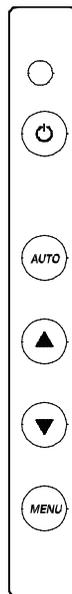


Figure 2-1. Single Rail Console with Modular KVM Switch OSD Control Bar



2.1 Auto Tune

Press the "Auto Tune" button. The panel will adjust the display size automatically and also tune the panel for optimal viewing.

2.2 Input Source

1. Press the "Menu" button.
2. Use the "Down" and "Up" button to scroll.

Auto Tune

Input Source

Brightness

Contrast

Color

Position

Language

Recall

Exit

3. Press the "Menu" button to enter, and you will see:

VGA / DVI

4. Use the "Down" and "Up" buttons to select the input signal source.
5. Press the "Menu" button to enter.

2.3 Brightness

1. Press the "Menu" button.
2. Use the "Down" and "Up" button to scroll.

Auto Tune

Input Source

Brightness

Contrast

Color

Position

Language

Recall

Exit

3. Press the "Menu" button to enter.
4. Use the "Down" and "Up" buttons to adjust the display brightness.
5. Press the "Menu" button to enter.





2.4 Contrast

1. Press the "Menu" button.
2. Use the "Down" and "Up" buttons to scroll.

Auto Tune
Input Source
Brightness
Contrast
Color
Position
Language
Recall
Exit

3. Press the "Menu" button to enter.
4. Use the "Down" and "Up" buttons to adjust the display contrast.
5. Press the "Menu" button to enter.

2.5 Color

1. Press the "Menu" button.
2. Use the "Down" and "Up" button to scroll.

Auto Tune
Input Source
Brightness
Contrast
Color
Position
Language
Recall
Exit

3. Press the "Menu" button to enter. And you will see:

Icon	Description
9300°K	To set CIE coordinates at 9300°K color
7500°K	To set CIE coordinates at 7500°K color
6500°K	To set CIE coordinates at 6500°K color
User	To set user defined CIE
Auto Color	To auto adjust color
Return	To exit and return to the previous page

Table 2-2. Icon Description

4. Use the "Down" and "Up" buttons to adjust the display color.
5. Press "Menu" to enter.





2.6 Position

1. Press the "Menu" button.
2. Use the "Down" and "Up" buttons to scroll.

Auto Tune
 Input Source
 Brightness
 Contrast
 Color
Position
 Language
 Recall
 Exit

3. Press the "Menu" button to enter. And you will see:

Icon	Description
Image Pos	To adjust the position of the image.
OSD Pos	To adjust the position of the OSD.
Return	To exit and return to the previous page

Table 2-3. Icon Description

4. Use the "Down" and "Up" buttons to scroll.
5. Press the "Menu" button to enter.

2.7 Language

1. Press the "Menu" button.
2. Use the "Down" and "Up" buttons to scroll.

Auto Tune
 Input Source
 Brightness
 Contrast
 Color
 Position
Language
 Recall
 Exit

3. Press the "Menu" button to enter. And you will see:

English
 German
 French
 Italian
 Spanish

4. Use the "Down" and "Up" buttons to scroll.
5. Press the "Menu" button to enter.





2.8 Recall

1. Press the "Menu" button.
2. Use the "Down" and "Up" buttons to scroll.

- Auto Tune
- Input Source
- Brightness
- Contrast
- Color
- Position
- Language
- Recall
- Exit

3. Press the "Menu" button to enter, and you will see:
Yes / No
4. Select "Yes" button then "Menu" button to recall the factory setting. Select "No" to return to the previous page.

2.9 Exit

1. Press the "Exit" button to quit OSD menu.

2.10 Power Indicator

- GREEN ON
- ORANGE STANDBY
- NO LIGHT OFF

Note: OSD – On Screen Display





3. Installation

3.1 Install 15" / 17" Single Rail Console Into Cabinet

3.1.1 Notes


1. Please check all peripherals according the list before installation. To make sure that the unit was not damaged during shipping. If you encounter any problem, please contact Atlas Sound.
2. Before installation, make sure all peripherals and computer have been turned off.
3. The cabinet depth range must be in between 19.84" – 39.38" (504mm – 1000mm).
Contact your Atlas Sound for deeper cabinet applications.
4. If the cabinet depth is between 24.17" – 31.5" (614mm ~ 800mm), please refer to "Step A" (Page x).
If the cabinet depth is between 19.84" – 24.17" (504mm ~ 614mm), please refer to "Step B" (Page X).
If the cabinet depth is between 31.5" – 39.37" (800mm ~ 1000mm), please refer to "Step C" (Page x).
5. Reliable grounding of rack-mounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuit.






3.1.2 Hardware Kits Contents


- 1. Two Rails with Front and Rear Brackets
(Please Identify the Brackets. Right and Left Sides are Different.)

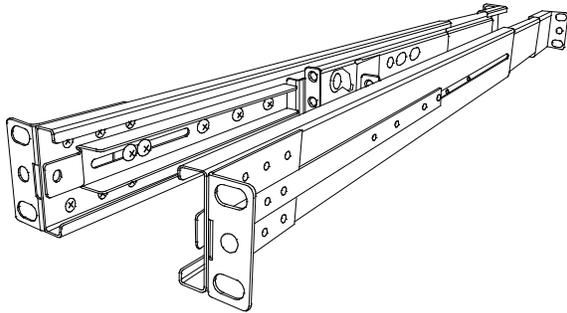

- 2. Two Extended Brackets

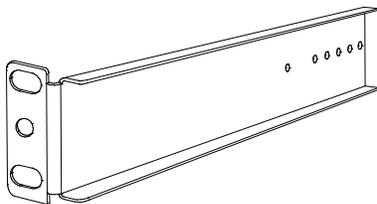

- 3. Two Short Brackets

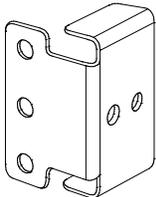


- 4. Two Bracket Attachments



- 5. Six (6) Screws (Length = 0.24" (6 mm)) 

- 6. Six (6) Screws 


- 7. Two Keys

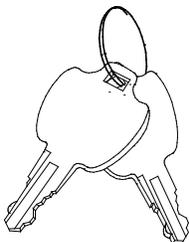




3.1.3 Step A (Install Console):


1. Adjust rail until two screws appear.

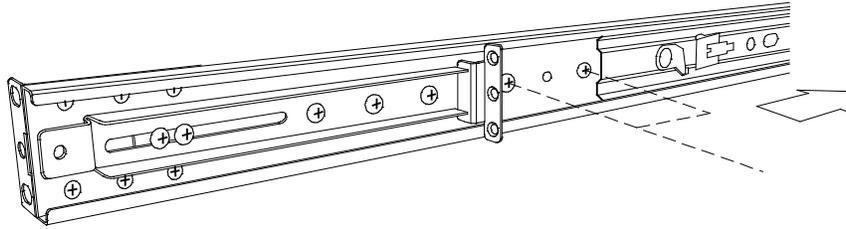


2. Loosen (Not Remove) seven screws.

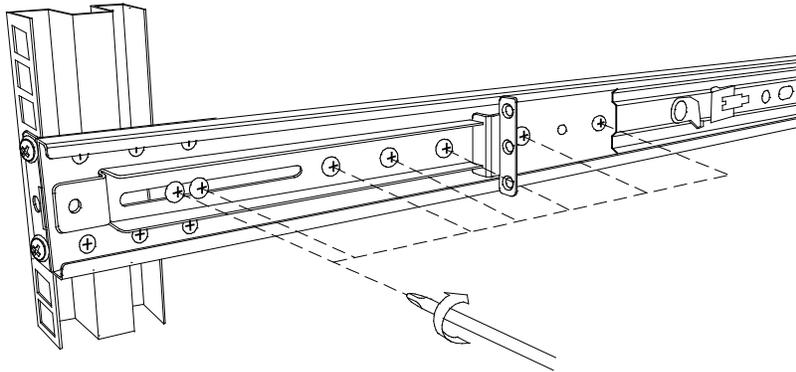

3. Adjust rail to fit your cabinet.

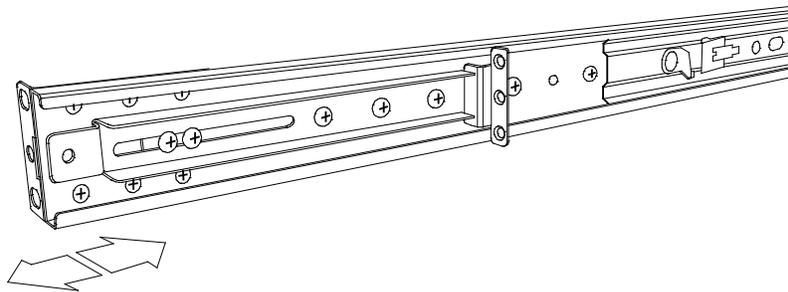


4. Install front and rear bracket on cabinet.

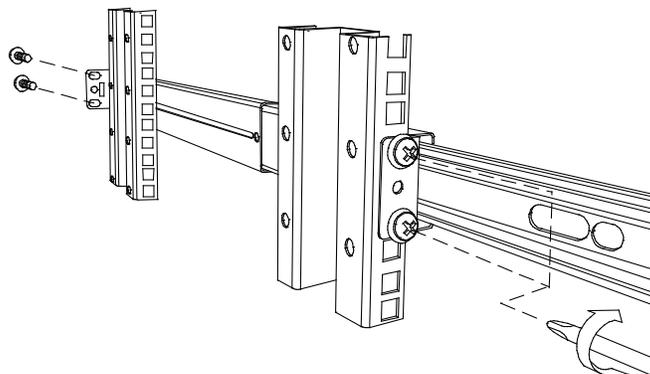




5. Tighten seven screws.



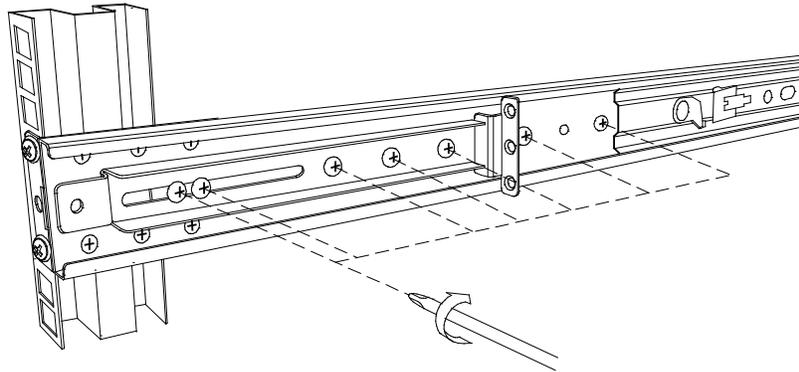


6. Repeat step 1-5 for the other side.

7. Push console into rails. (Be careful that the rear box is loose when removing the console from the carton.)

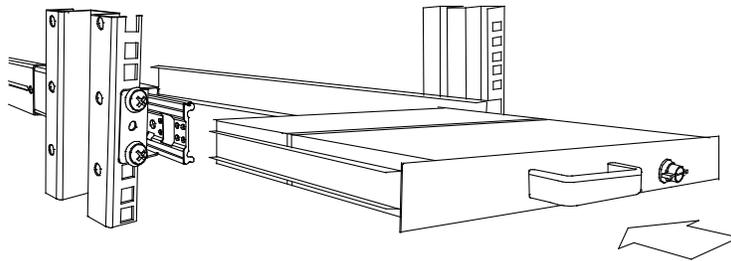


8. Unlock and pull rail-lock switch (left and right at the same time) then push console to the end.

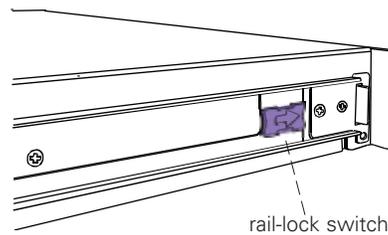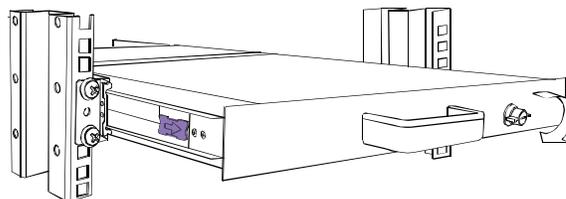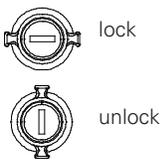




9. Install three screws (Length = 0.24" / 6 mm) in rear of the console. (Both sides)

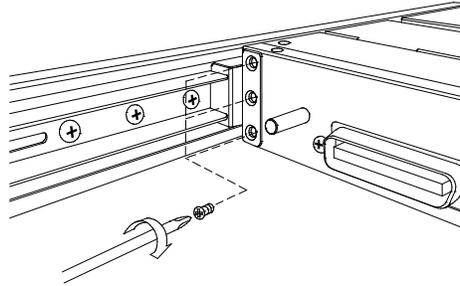


10. Finish installation as below. Rack mounting completed.

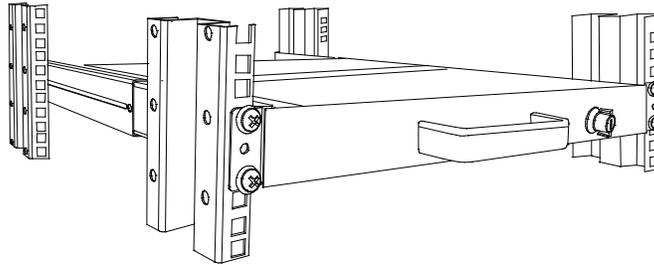




3.1.4 Step B (Replace Short Bracket):


1. Remove seven screws.

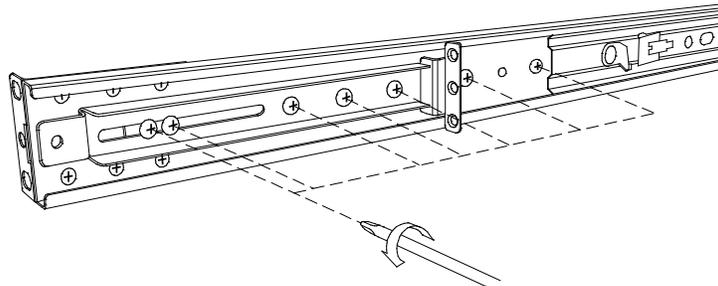


2. Take the two original brackets out.

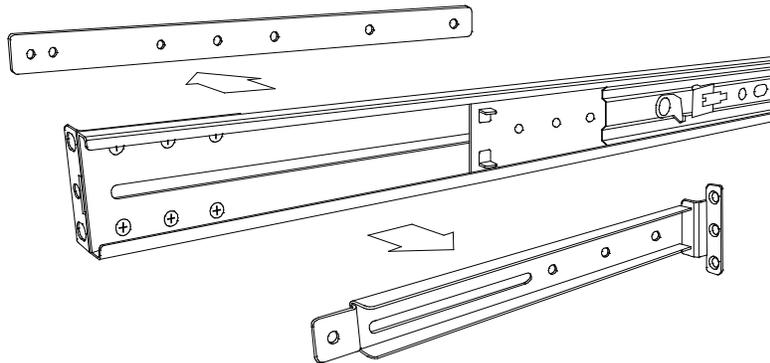

3. Install short bracket to rear of the rail.

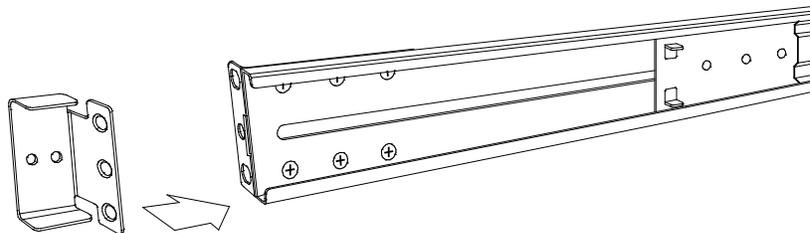

4. Install four screws (do not tighten) to combine rail, short bracket and bracket attachment.

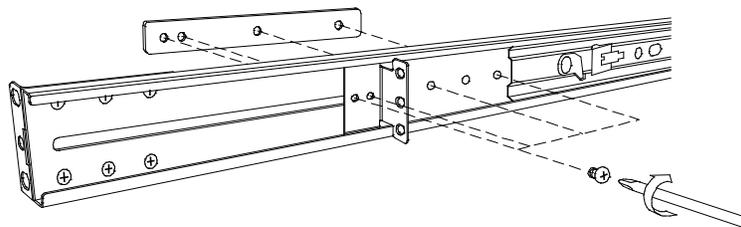


5. Repeat step 1 - 4 for the other side.
6. Repeat step 3 - 10 of Step A to finish the installation.




3.1.5 Step C (Replace Extended Bracket):


1. Loosen (Not Remove) seven screws.

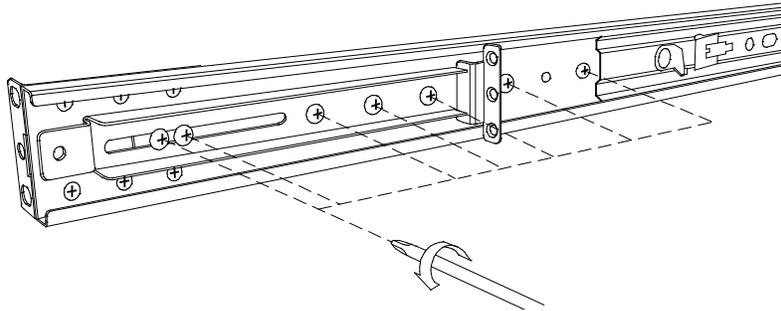


2. Remove six screws.

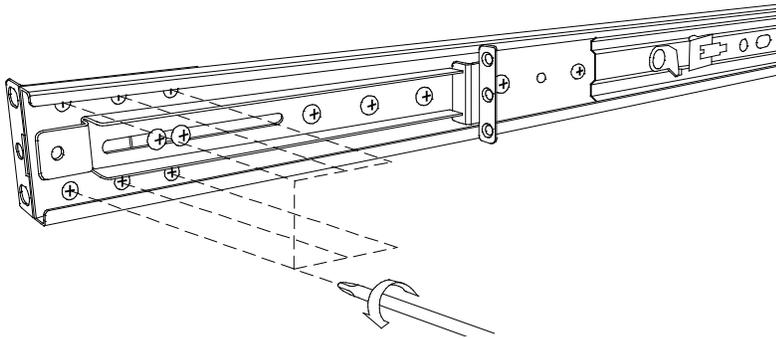

3. Remove rear bracket.

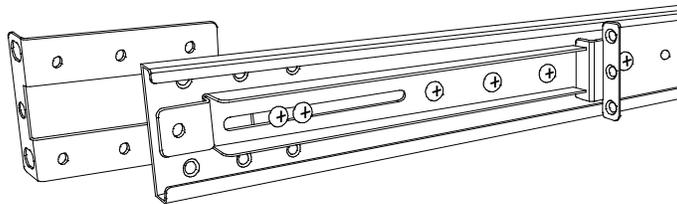

4. Adjust rail and input extended bracket to rear of the rail then adjust extended bracket to fit the cabinet. Install 2-3 screws (do not tighten) upon the length you need. One screw will not be used.

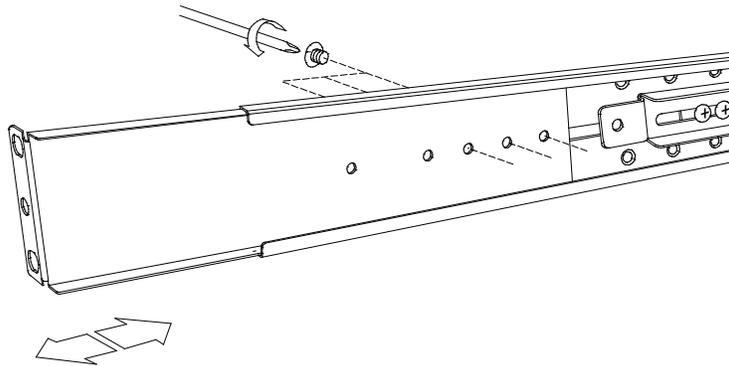


5. Repeat steps 1-4 for the other side.
6. Repeat steps 3-10 of step A to finish the installation.






3.1.6 Unload Step


1. Make sure the console has locked and turned off.
2. Loosen two thumb screws and pull modular KVM switch out, if installed.

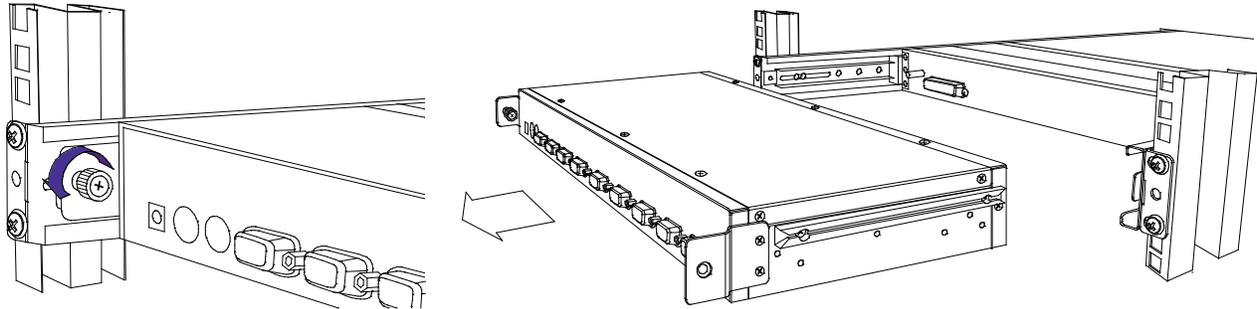


3. Release three screws in rear of the console. (Both Sides)

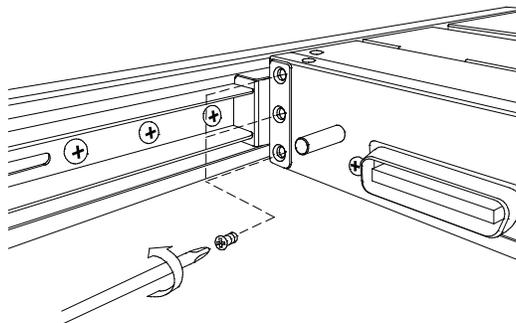

4. Unlock.

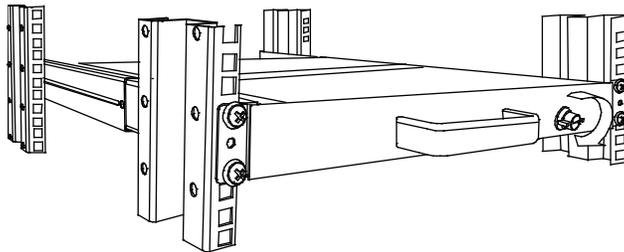


5. Pull console out until the console locks.

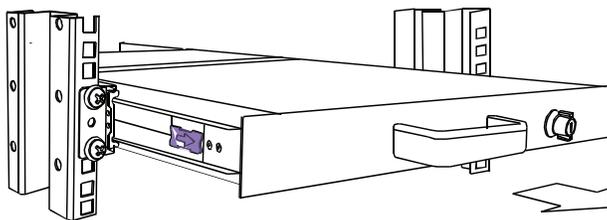




6. Pull rail-release switch and pull console out. (Both sides) (Be careful when you pull out console.)

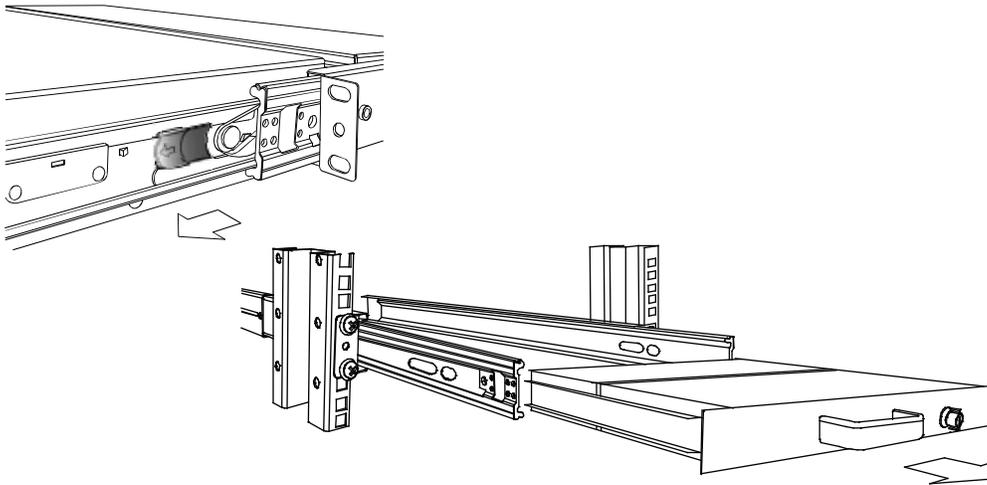

7. Push rail-lock switch on the rail and push rail back. (Both sides)

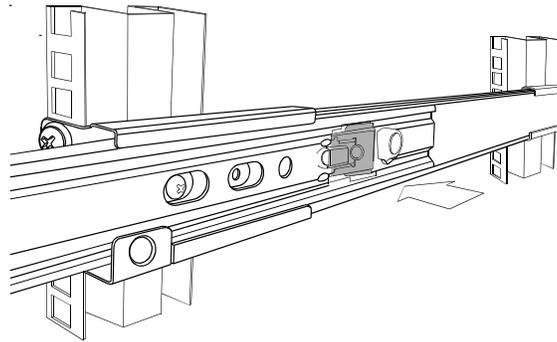




3.3 Install Modular KVM Switch Step

3.3.1 Hardware Kits Contents

1. Two Brackets with Thumb Screws

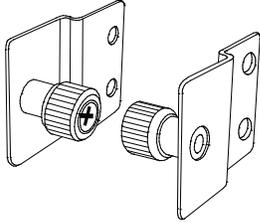


2. Four Screws (Length = 0.24" (6 mm))




3.3.2 Install Modular KVM Switch

1. Install two screws (Length = 0.24" (6 mm)) to combine bracket and KVM switch. (Both sides)

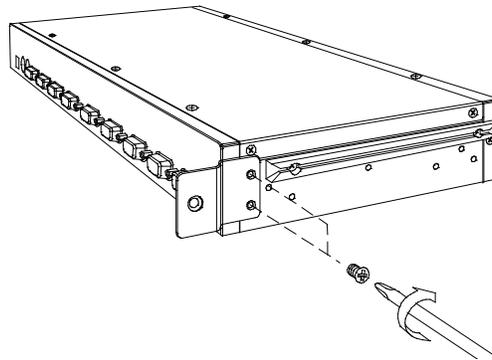


2. Push KVM switch into the rails from rear of cabinet.

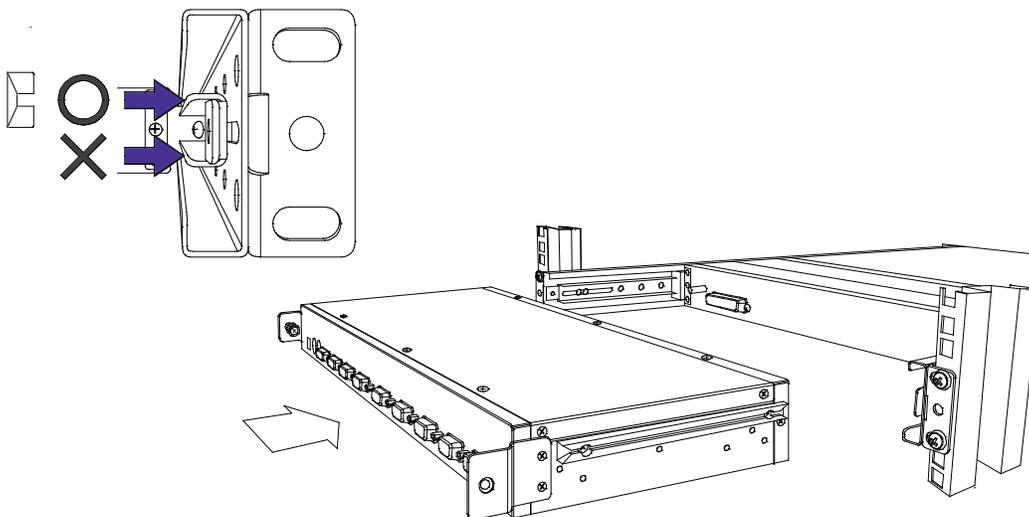



3. Tighten thumb screw of bracket to fix KVM switch in console and finish installation. (Both sides)

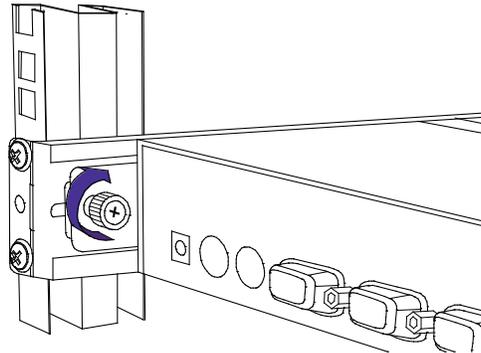

3.4 Installing the Video Card and Video Driver

Before connecting the LCD console, make sure your computer has a video card already installed for the monitor. After you connect the console, install the video software driver. The video driver is supplied by the video card manufacturer and may be found on the CD-ROM that came with your computer. If you need information on installing a video card or video driver, refer to the manual that came with your video card.

3.4.1 Configuring the Display Settings

After connecting the console and turning on your computer, you may need to configure one or more of the following display settings:

- Display mode (also called desktop area or video resolution)
- Refresh rate (also called vertical scan rate or vertical sync)
- Color depth (also called color palette or number of colors)

Each video card has several controls that let you adjust the display settings. However, the software and driver for each video card is unique. In most cases, you adjust these settings by using a program or utility provided by the manufacturer of the video card. Most video cards use the Windows Display Properties control panel to configure the display. To open the Windows Display Properties, click the right mouse button in a blank area of the Windows desktop and then select "Properties". The "Settings" tab usually lets you change the Color Palette and the Desktop Area (x by y pixel resolution).

Some video cards integrate additional features into the Windows Display Properties control panel to give you an exceptional setup that is flexible and easy to use. For example, the control panel may include an "Advanced Properties" button, an "Adjustment" tab, or a "Refresh" tab for changing other settings. Other video cards have a separate utility for setting display properties.

Whenever you change the resolution, color, or refresh rate, the image size, position, or shape may change - this behavior is normal. You can readjust the image using the monitor on-screen controls. For more information on the monitor on-screen controls, refer to Chapter 2. For more information on configuring the display settings, refer to the manual that came with your video card.





3.4.2 Connecting the Console

To connect an LCD console to a computer, perform the following steps



Figure 3-1. The rear view of LCD console

1. Turn off your computer. You should always turn off your computer before connecting or disconnecting a device.
2. Connect the video (VGA) connector of the KVM cable to the video card connector on the rear panel of your computer.
3. Identify and connect the PS/2 mouse and PS/2 keyboard connector to the correct PS/2 ports on the rear panel of your computer. Or you can use USB interface to connect your computer.

(Use PS/2-USB switch to select your interface. The switch has to be on PS/2 side when you use PS/2 interface connector.)

Note: Do not plug PS/2 and USB cables at the same time

4. Connect the AC to DC power adapter to the power inlet on the console and then to a power outlet.

3.5 Turning on the Console

Make sure all cables and the AC to DC power adapter are connected properly. Be sure to tighten all connector screws. Using two hands, grasp the rear of the console, lift the tab and pull the panel up and forward. This will disengage the momentary on / off switch and the unit should power on. The LED on the left of the monitor panel should turn from orange to green, verifying that the unit is operational.

3.6 Testing the Console

To test that the console is working properly, perform the following steps:

1. Power up the console, and then turn on your computer.
2. Make sure the video image is centered within the screen area. Use the OSD controls to adjust the image (see note below) or press the Auto button on the right hand side of the monitor.

Note: If the unit does not power up when the panel is pulled up, try pushing the soft power on/off button on the left or under side of the monitor panel to power up the unit.

Note: You can adjust the horizontal and vertical position, contrast, and brightness to better suit your video card and your personal preference. Refer to Section 2 for more information on using the on-screen menu to adjust the video display.

Before you begin, make sure that power to all the devices you will be connecting up have been turned off. To prevent damage to your installation due to ground potential difference, make sure that all the devices on the installation are properly grounded. Consult Atlas Sound for any technical issues, if necessary.





All products manufactured by Atlas Sound are warranted to the original dealer/installer, industrial or commercial purchaser to be free from defects in material and workmanship and to be in compliance with our published specifications, if any. This warranty shall extend from the date of purchase for a period of three years on all Atlas Sound products, including SOUNDOLIER brand, and ATLAS SOUND brand products except as follows: one year on electronics and control systems; one year on replacement parts; and one year on Musician Series stands and related accessories. Additionally, fuses and lamps carry no warranty. Atlas Sound will solely at its discretion, replace at no charge or repair free of charge defective parts or products when the product has been applied and used in accordance with our published operation and installation instructions. We will not be responsible for defects caused by improper storage, misuse (including failure to provide reasonable and necessary maintenance), accident, abnormal atmospheres, water immersion, lightning discharge, or malfunctions when products have been modified or operated in excess of rated power, altered, serviced or installed in other than a workman like manner. The original sales invoice should be retained as evidence of purchase under the terms of this warranty. All warranty returns must comply with our returns policy set forth below. When products returned to Atlas Sound do not qualify for repair or replacement under our warranty, repairs may be performed at prevailing costs for material and labor unless there is included with the returned product(s) a written request for an estimate of repair costs before any nonwarranty work is performed. In the event of replacement or upon completion of repairs, return shipment will be made with the transportation charges collect.

EXCEPT TO THE EXTENT THAT APPLICABLE LAW PREVENTS THE LIMITATION OF CONSEQUENTIAL DAMAGES FOR PERSONAL INJURY, ATLAS SOUND SHALL NOT BE LIABLE IN TORT OR CONTRACT FOR ANY DIRECT, CONSEQUENTIAL OR INCIDENTAL LOSS OR DAMAGE ARISING OUT OF THE INSTALLATION, USE OR INABILITY TO USE THE PRODUCTS. THE ABOVE WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES INCLUDING BUT NOT LIMITED TO WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Atlas Sound does not assume, or does it authorize any other person to assume or extend on its behalf, any other warranty, obligation, or liability. This warranty gives you specific legal rights and you may have other rights which vary from state to state.

Should your MMK15-RM / MMK17-RM require service, please contact the Atlas Sound warranty department at 1-866-689-8055, ext. 277 to obtain an RA number.

Atlas Sound Tech Support can be reached at 1-800-876-3333.

Visit our website at www.AtlasSound.com to see other Atlas products.

©2008 Atlas Sound L.P. All rights reserved. Atlas Sound and Strategy Series are trademarks of Atlas Sound L.P. All other trademarks are the property of their respective owners. ATS003331 RevA 1/09



1601 Jack McKay Blvd. • Ennis, Texas 75119 U.S.A.
Telephone: 800.876.3333 • Fax: 800.765.3435